


3/4

### PROGRAMMA PER MICRO 1

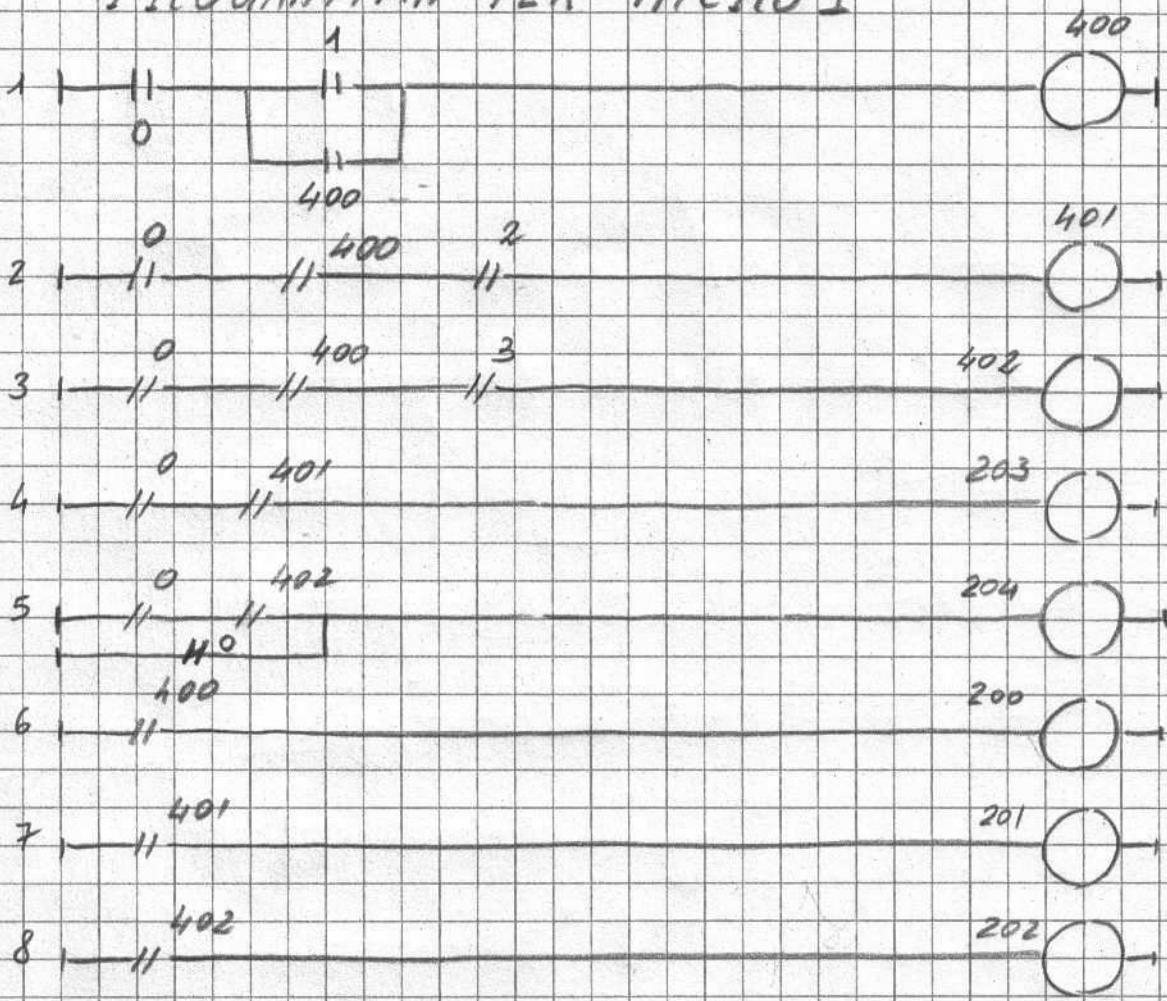

### PROGRAMMA PER MICRO 1 A TASTIERA

(1) LOD 0 LOD 1 OR 400 AND SHF LOD OUT 400	AND 3 OUT 402 (4) LOD 0 AND 401 OUT 203	(7) LOD 401 OUT 201 (8) LOD 402 OUT 202
(2) LOD 0 AND 400 AND 2 OUT 401	(5) LOD 0 AND 402 OR NOT 0 OUT 204 (6) LOD 400 OUT 200	DIGITARE ENTER DOPO OGNI COMANDO E DOPO: TRS ENT ENT
(3) LOD 0 AND 400		

*mf*